

Stückliste / Packing list

AGG3.710 / AGG3.720 / AGG3.730

				DE	EN
AGG3.710	AGG3.720	AGG3.730	Anschluss- bezeichnung ----- - Terminal designation	Beschreibung	Description
				RAST5	RAST5
1	10	50	X2-01	Gebläsemotor (M)	Fan motor (M)
1	10	50	X2-02	Ölvorwärmer (OPH)	Oil preheater (OPH)
1	10	50	X2-03	Alarm (AL), Reset	Alarm (AL), Reset
1	10	50	X2-09B	Stellantrieb (SA) (Brennstoffventil 2- Nocke)	Actuator (SA) (fuel valve 2 cam)
1	10	50	X2-09A	Stellantrieb (SA) (ZU, Kleinlast, Nennlast, Rückmeldung; N)	Actuator (SA) (closed, low-fire, nominal load, feedback signal, N)
1	10	50	X3-02	Luftdruckwächter (LP)	Air pressure switch (LP)
1	10	50	X3-04	Spannungsversorgung-Sicherheitskette (L, N, PE - SL)	Power supply-safety loop (L, N, PE - SL)
1	10	50	X4-02	Zündung (Z)	Ignition (Z)
1	10	50	X5-01	Gasdruckwächter-min (Pmin)	Gas pressure switch-min (Pmin)
1	10	50	X5-03	Leistungsregler extern (LR)	Load controller external (LR)
1	10	50	X6-03	Sicherheitsventil (SV)	Safety valve (SV)
1	10	50	X7-01	Brennstoffventil (V3) / Hilfsausgang (AUX) / Pilotventil (PV)	Fuel valve (V3) / auxiliary output (AUX) / pilot valve (PV)
1	10	50	X7-02	Brennstoffventil (V2)	Fuel valve (V2)
1	10	50	X7-04	Brennstoffventil (V1) / Betriebsanzeige (B4)	Fuel valve (V1) / operation indicator lamp (B4)
1	10	50	X9-04	Gasdruckwächter, Ventildichtekontrolle (P LT)	Gas pressure switch, valve proofing system (P LT)
1	10	50	X10-05	Flammenfühler ION, QRB..., QRC...	Flame detector ION, QRB..., QRC...
1	10	50	X10-06	Flammenfühler QRA2... / QRA4... (USA)	Flame detector QRA2... / QRA4... (US)

				RAST3,5	RAST3.5
1	10	50	X65	Leistungsregler analog (LR)	Load controller analog (LR)
1	10	50	X66	Rückmeldepotentiometer Stellantrieb	Feedback signal of potentiometer actuator
1	10	50	X76	PWM-Ansteuerung	PWM control